


Pipelining

- Reconsider the data path we just did
- Each instruction takes from 3 to 5 clock cycles
- However, there are parts of hardware that are idle many time
- We can reorganize the operation
- Make each hardware block independent
 - 1. Instruction Fetch Unit
 - 2. Register Read Unit
 - 3. ALU Unit
 - 4. Data Memory Read/Write Unit
 - 5. Register Write Unit
- Units in 3 and 5 cannot be independent, but operations can be
- Let each unit just do its required job for each instruction
- If for some instruction, a unit need not do anything, it can simply perform a noop

1

Gain of Pipelining

- Improve performance by increasing instruction throughput
- Ideal speedup is number of stages in the pipeline
- Do we achieve this? No, why not?

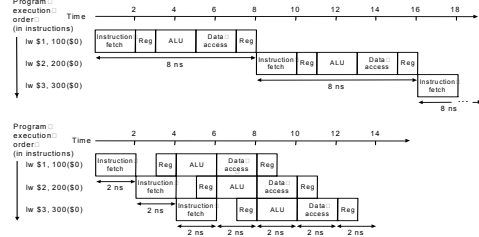


2

Pipelining

- What makes it easy
 - all instructions are the same length
 - just a few instruction formats
 - memory operands appear only in loads and stores
- What makes it hard?
 - structural hazards: suppose we had only one memory
 - control hazards: need to worry about branch instructions
 - data hazards: an instruction depends on a previous instruction
- We'll study these issues using a simple pipeline
- Other complication:
 - exception handling
 - trying to improve performance with out-of-order execution, etc.

3


Basic Idea

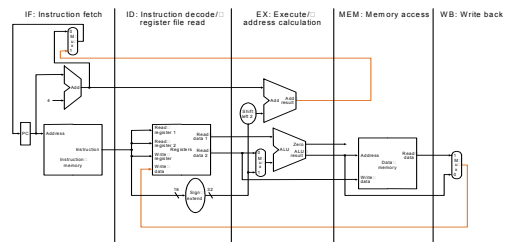

- What do we need to add to actually split the datapath into stages?

4


Pipelined Data Path

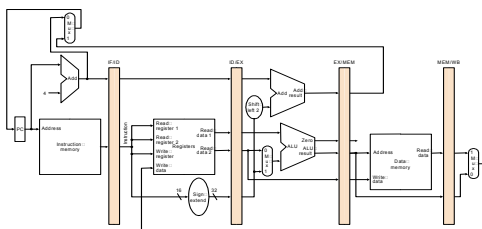

Can you find a problem even if there are no dependencies?
What instructions can we execute to manifest the problem?

5

Corrected Data Path

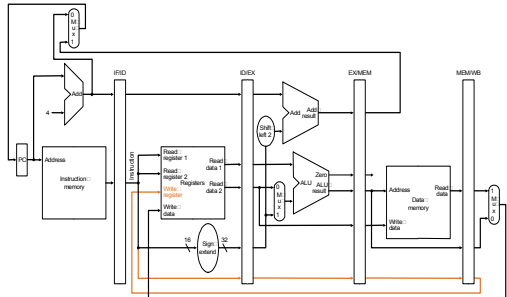

6


Execution Time

- Time of n instructions depends on
 - Number of instructions n
 - # of stages k
 - # of control hazard and penalty of each step
 - # of data hazards and penalty for each
- Time = $n + k - 1 + \text{load hazard penalty} + \text{branch penalty}$
- Load hazard penalty is 1 or 0 cycle
 - depending on data use with forwarding
- branch penalty is 3, 2, 1, or zero cycles depending on scheme

7

Design and Performance Issues With Pipelining

- Pipelined processors are not EASY to design
- Technology affect implementation
- Instruction set design affect the performance, i.e., beq, bne
- More stages do not lead to higher performance

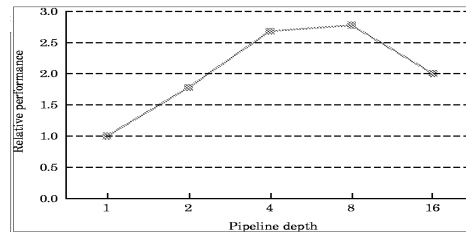


8

Pipeline Operation

- In pipeline one operation begins in every cycle
- Also, one operation completes in each cycle
- Each instruction takes 5 clock cycles (k cycles in general)
- When a stage is not used, no control needs to be applied
- In one clock cycle, several instructions are active
- Different stages are executing different instructions
- How to generate control signals for them is an issue

9

Graphically Representing Pipelines

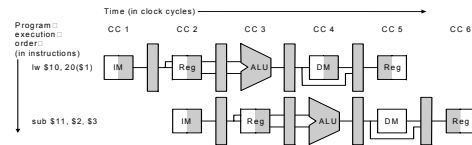

- Can help with answering questions like:
 - how many cycles does it take to execute this code?
 - what is the ALU doing during cycle 4?
 - use this representation to help understand datapaths

10

Instruction Format







31	26	25	21	20	16	15	11	10	6	5	0
LW		REG 1		REG 2		LOAD ADDRESS			OFFSET		
31	26	25	21	20	16	15	11	10	6	5	0
SW		REG 1		REG 2		STORE ADDRESS			OFFSET		
31	26	25	21	20	16	15	11	10	6	5	0
R-TYPE		REG 1		REG 2		DST		SHIFT AMOUNT		ADD/AND/OR/SLT	
31	26	25	21	20	16	15	11	10	6	5	0
BEQ/BNE		REG 1		REG 2		BRANCH ADDRESS			OFFSET		
31	26	25	21	20	16	15	11	10	6	5	0
JUMP			JUMP					ADDRESS			

11

Operation for Each Instruction


LW:	SW:	R-Type:	BR-Type:	JMP-Type:
1. READ INST	1. READ INST	1. READ INST	1. READ INST	1. READ INST
2. READ REG 1	2. READ REG 1	2. READ REG 1	2. READ REG 1	2. READ REG 1
3. ADD REG 1 + OFFSET	3. ADD REG 1 + OFFSET	3. OPERATE on REG 1 / REG 2	3. SUB REG 2 from REG 1	3. READ REG 2
4. READ MEM	4. WRITE MEM	4.	4.	4.
5. WRITE REG2	5.	5. WRITE DST	5.	5.

12

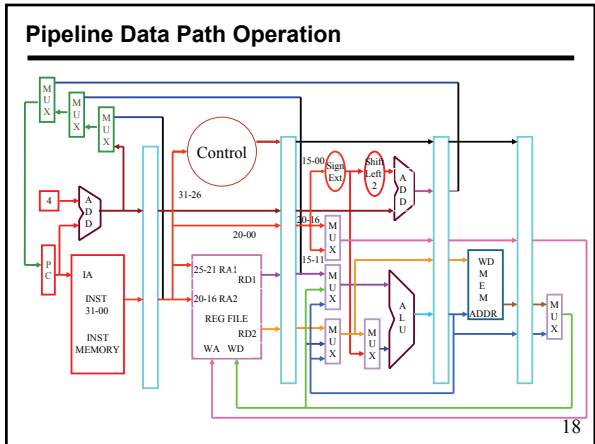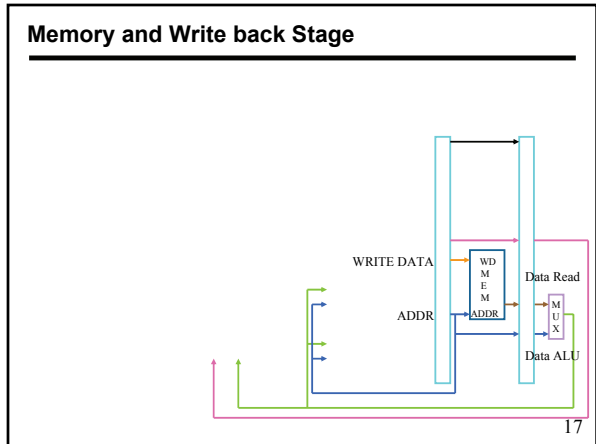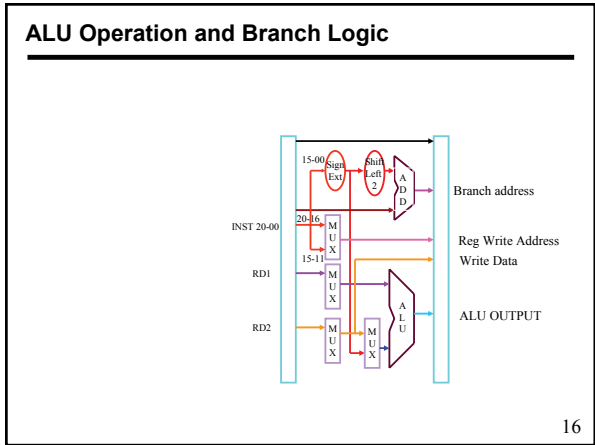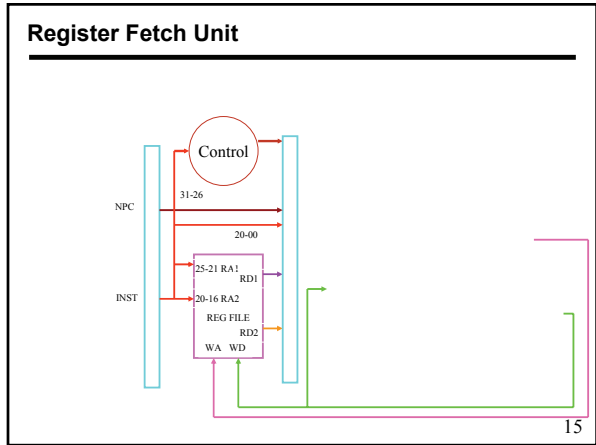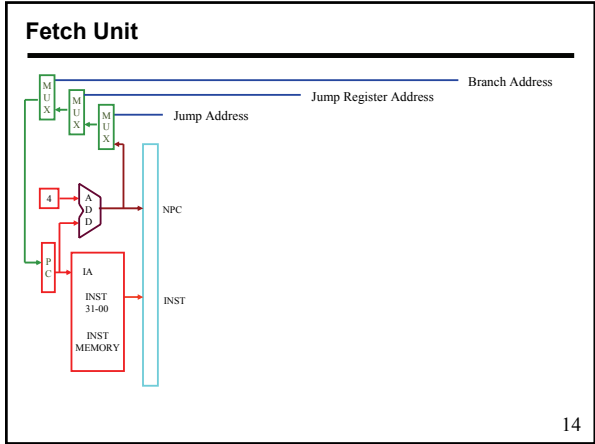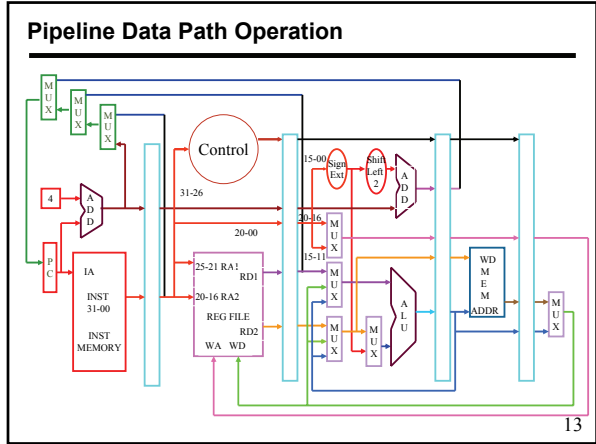

Dependencies

- Problem with starting next instruction before first is finished
 - dependencies that “go backward in time” are data hazards

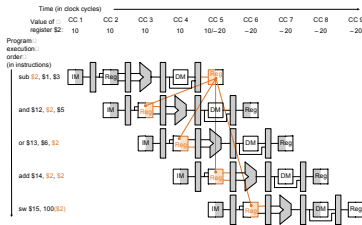

19

A program with data dependencies


- Consider the following program

```
add $t0, $t1, $t2
add $t1, $t0, $t3
and $t2, $t4, $t0
or $t3, $t1, $t0
slt $t4, $t2, $t3
```

- Problem with starting next instruction before first is finished
 - dependencies that “go backward in time” are data hazards

20

Data Path Operation

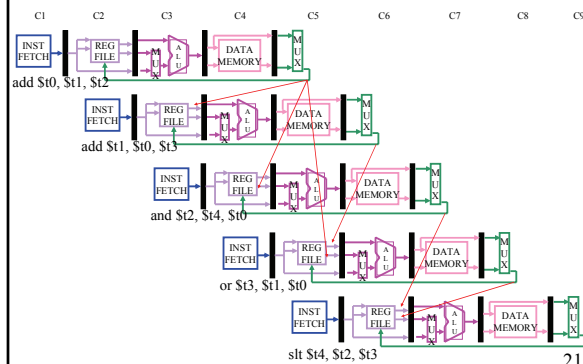

21

Solution: Software No-ops/Hardware Bubbles

- Have compiler guarantee no hazards
- Where do we insert the “no-ops” ?

```
sub    $t2, $t1, $t3
and    $t12, $t2, $t5
or     $t13, $t6, $t2
add    $t14, $t2, $t2
sw     $t15, 100($t2)
```


Problem: this really slows us down!

- Also, the program will always be slow even if a techniques like forwarding is employed afterwards in newer version
- Hardware can detect dependencies and insert no-ops in hardware
 - Hardware detection and no-op insertion is called stalling
 - This is a bubble in pipeline and waste one cycle at all stages
 - Need two or three bubbles between write and read of a register

22

Hazard Detection Unit


- Stall by letting an instruction that won't write anything go forward

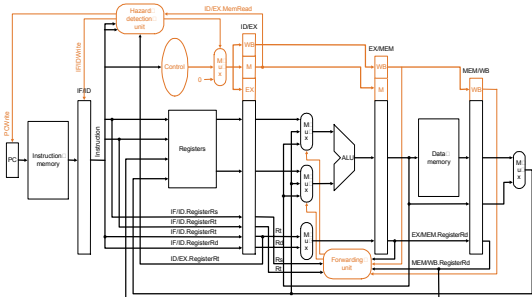



23

Stalling

- Hardware detection and no-op insertion is called stalling
- We stall the pipeline by keeping an instruction in the same stage

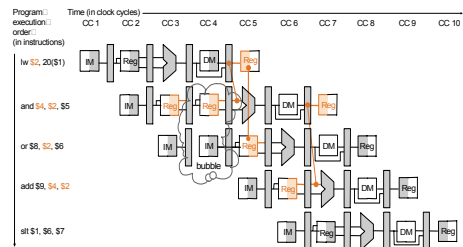

24

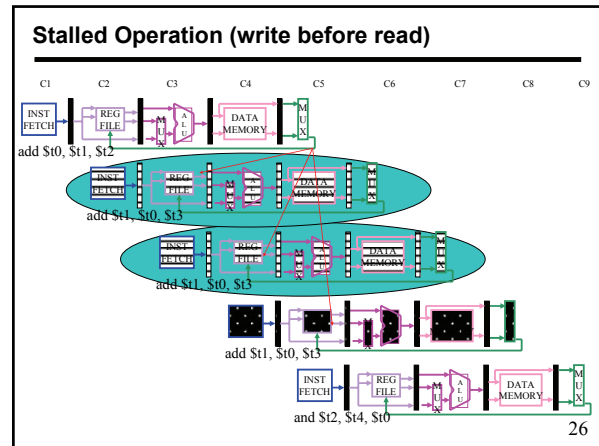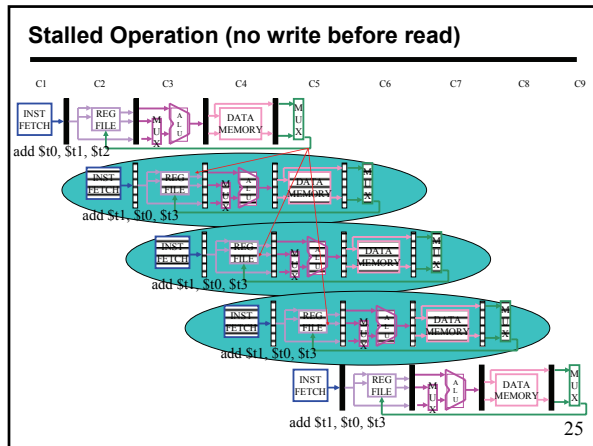

Detecting Hazards for Forwarding

- EX hazard**
 - If ((EX/MEM.RegWrite) and (EX/MEM.RegisterRd != 0) and (EX/MEM.RegisterRd = ID/EX.RegisterRs)) ForwardA = 10
 - If ((EX/MEM.RegWrite) and (EX/MEM.RegisterRd != 0) and (EX/MEM.RegisterRd = ID/EX.RegisterRt)) ForwardB = 10
- MEM hazard**
 - If ((MEM/WB.RegWrite) and (MEM/WB.RegisterRd != 0) and (MEM/WB.RegisterRd = ID/EX.RegisterRs)) ForwardA = 01
 - If ((MEM/WB.RegWrite) and (MEM/WB.RegisterRd != 0) and (MEM/WB.RegisterRd = ID/EX.RegisterRt)) ForwardB = 10
- In case of lw followed by a sw instruction, forwarding will not work. This is because data in MEM stage are still being read**
 - Plan on adding forwarding in MEM stage of put a stall/bubble
- In case of lw followed by an instruction that uses the value**
 - One has to add a stall

27

Forwarding

- Use temporary results, don't wait for them to be written
 - register file forwarding to handle read/write to same register
 - ALU forwarding
 - May also need forwarding to memory (think!!)

Time (in clock cycles)	CC 1	CC 2	CC 3	CC 4	CC 5	CC 6	CC 7	CC 8	CC 9
Value of register \$2 :	10	10	10	10	-20	-20	-20	-20	-20
Value of EX/MEM :	X	X	X	X	X	X	X	X	X
Value of MEM/WB :	X	X	X	X	-20	X	X	X	X


Program execution order (in instructions):

```

sub $t1, $t1, $t3
and $t2, $t2, $t5
or $t3, $t6, $t2
add $t4, $t2, $t2
sw $t4, $t2($t3)
  
```

*** What if this \$2 was \$13? ***

28

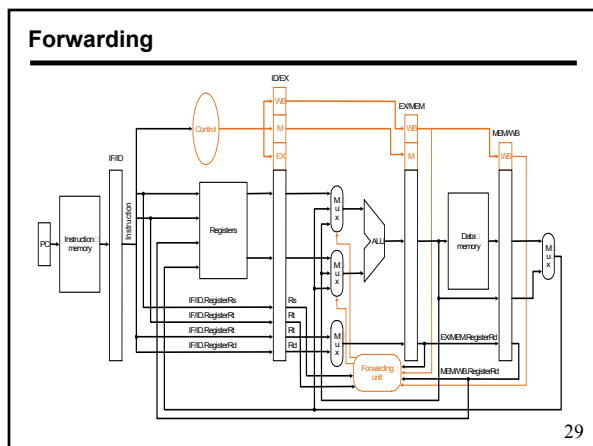

Can't always forward

- Load word can still cause a hazard:
 - an instruction tries to read a register following a load instruction that writes to the same register.

Time (in clock cycles)	CC 1	CC 2	CC 3	CC 4	CC 5	CC 6	CC 7	CC 8	CC 9
Value of register \$2 :	10	10	10	10	-20	-20	-20	-20	-20
Value of EX/MEM :	X	X	X	X	X	X	X	X	X
Value of MEM/WB :	X	X	X	X	-20	X	X	X	X

Program execution order (in instructions):

```


lw $t2, 20($t1)
and $t4, $t2, $t5
or $t3, $t6, $t2
add $t9, $t4, $t2
sll $t1, $t6, $t7
  
```

- Thus, we need a hazard detection unit to "stall" the load instruction

30

Branch Hazards

- When we decide to branch, other instructions are in the pipeline!

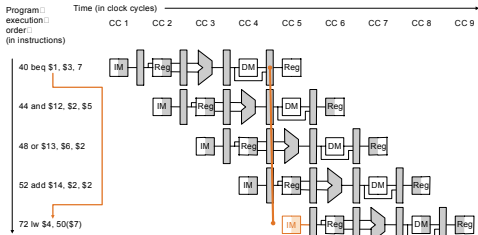

- We are predicting "branch not taken"
 - need to add hardware for flushing instructions if we are wrong

31

Improving Performance

- Try and avoid stalls! E.g., reorder these instructions:

```

lw $t0, 0($t1)
lw $t2, 4($t1)
sw $t2, 0($t1)
sw $t0, 4($t1)
    
```

- Add a "branch delay slot"
 - the next instruction after a branch is always executed
 - rely on compiler to "fill" the slot with something useful
- Superscalar: start more than one instruction in the same cycle

32

Other Issues in Pipelines

- Exceptions
 - Errors in ALU for arithmetic instructions
 - Memory non-availability
- Exceptions lead to a jump in a program
- However, the current PC value must be saved so that the program can return to it back for recoverable errors
- Multiple exception can occur in a pipeline
- Preciseness of exception location is important in some cases
- I/O exceptions are handled in the same manner

33


Handling Branches

- Branch Prediction
 - Usually we may simply assume that branch is not taken
 - If it is taken, then we flush the pipeline
 - Clear control signals for instruction following branch
- Delayed branch
 - Fill instructions that need to be executed even if branch occur
 - If none available fill NOOPs
- Reduce delay in resolving branches
 - Compare at register stage
 - Branch prediction table
 - PC value (for branch) and next address
 - One or two bits to store what should be prediction


34

Two State vs Four State Branch Prediction

- Two state model

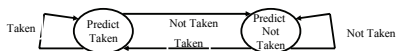


- Four State Model

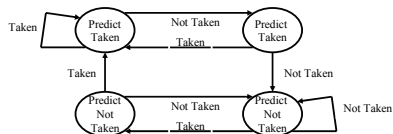


35

Pipeline with Early Branch Resolution/Exception

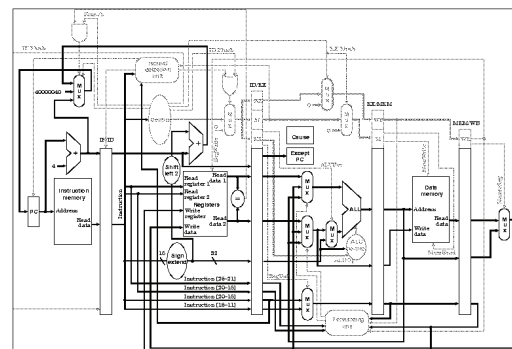


36

Superscalar Architecture

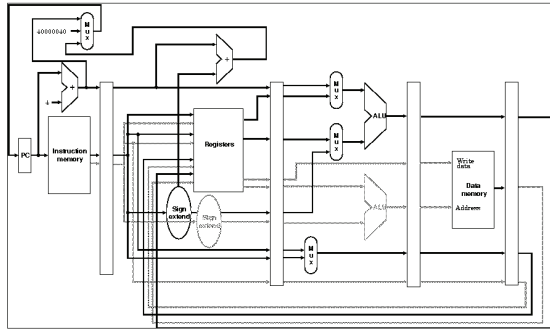

37

A Modern Pipelined Microprocessor

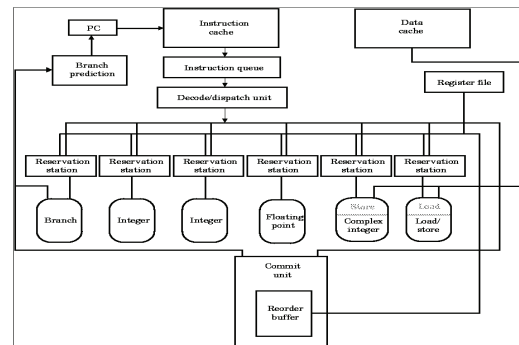

38

Important Facts to Remember

- Pipelined processors divide the execution in multiple steps
- However pipeline hazards reduce performance
 - Structural, data, and control hazard
- Data forwarding helps resolve data hazards
 - But all hazards cannot be resolved
 - Some data hazards require bubble or noop insertion
- Effects of control hazard reduced by branch prediction
 - Predict always taken, delayed slots, branch prediction table
 - Structural hazards are resolved by duplicating resources


39

Pipeline control

- We have 5 stages. What needs to be controlled in each stage?
 - Instruction Fetch and PC Increment
 - Instruction Decode / Register Fetch
 - Execution
 - Memory Stage
 - Write Back
- How would control be handled in an automobile plant?
 - a fancy control center telling everyone what to do?
 - should we use a finite state machine?

40

Pipeline Control

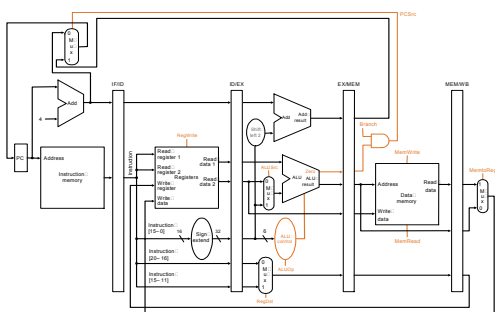


41

Pipeline Control


- Pass control signals along just like the data

Instruction	Execution/Address Calculation stage control lines				Memory access stage control lines			stage control lines	
	Reg Dst	ALU Opt	ALU Ops	ALU Src	Branch	Mem Read	Mem Write	Reg Write	Mem to Reg
R-format	1	1	0	0	0	0	0	1	0
lw	0	0	0	1	0	1	0	1	1
sw	X	0	0	1	0	0	1	0	X
beq	X	0	1	0	1	0	0	0	X

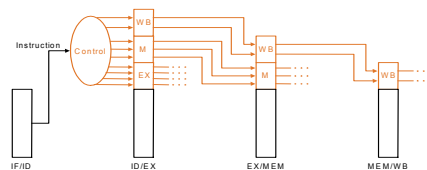

42

Data Path with Control

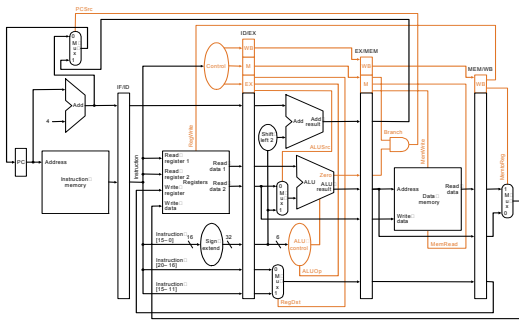

43

Flushing Instructions

